


INSTRUCTIONS

Ford Ranger (12~15) LED Tail Lights


- Tools needed:
T30 Torx Wrench (included)
Phillips Head Screw Driver (not included)

- 1 Use the T30 Torx wrench to remove the OEM tail light from the vehicle body panel. Also remove the harness from OEM tail light by unscrew the 3 metal fixing plates with a screw driver (as shown in red circles).


We also need to use the 2 tail light retainers from the OEM tail light, please remove them and install them onto the new tail light accordingly (as shown in blue circles).

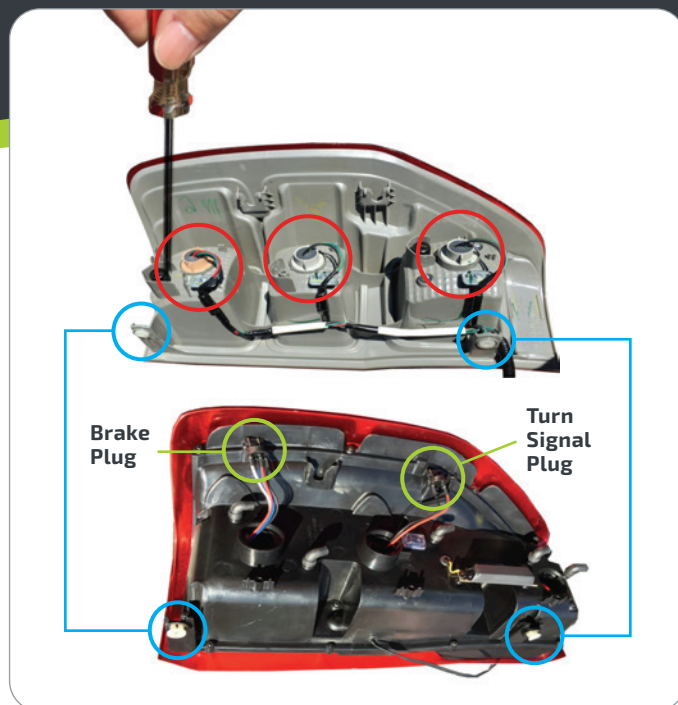

- 2 Twist and unlock the 3 bulb sockets to separate them from the tail light housing. Remove the Brake and Turn Signal bulbs from the sockets of harness. Leave the Reverse bulb (or Fog bulb) as it is.

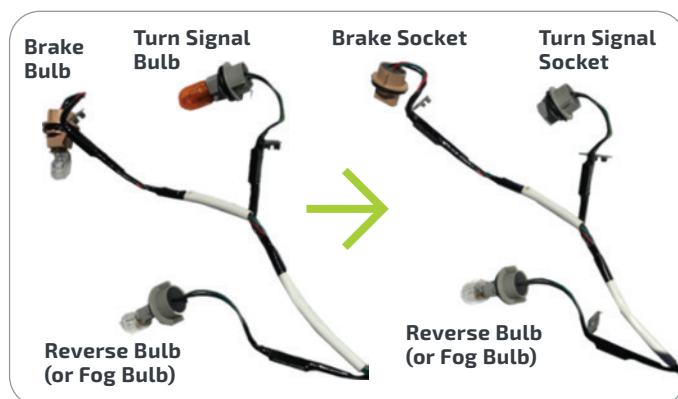

- 3 Take out the new tail light. Find the plugs (brake & turn signal plugs) at rear of the new tail light. Connect both plugs to the sockets of harness. Twist all 3 sockets till they are securely connected to the new tail light housing. Please fix the 3 metal fixing plates by a screw driver.

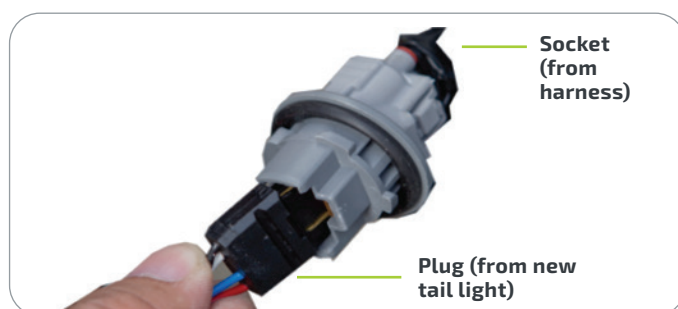

- 4 Install the new tail light onto the car by fix the 2 screws firmly.

- 5 Before hitting the road, please test and check all lights function properly (Position/Brake/Turn Signal/Reverse or Fog).